

WING BANNERS



SET UP



1 Join the rods making sure they fit flushly together.



2 Insert the rod into the sleeve.



3 Ensure the **tip** of the rod is pushed right to the end of the sleeve.



4 Hook the cord over the base.
If the banner is too tight or too loose adjust the cord and cleat.



5 To insert the banner into the base ensure the ring on the Quick Connect is **up**.
Insert the rod and push the ring **down** to lock it in place.



CARING FOR YOUR BANNER

- ▮ When inserting the rod push it to the end of the sleeve to avoid the top chaffing against the fabric.
- ▮ Ensure the rods are flush fitting for extra durability.
- ▮ Ensure the banner has even tension by adjusting the cord and cleat at the base.
- ▮ Erect the banner in an area big enough for 360° rotation so it doesn't rub against walls, plants, street signs etc.
- ▮ Use the correct hardware for the correct surface, for example a Stake for snow or sand, a Universal base on tiles or carpets. Universal rotating bases used outdoors must be weighted using a waterbag.
- ▮ When using a ground stake ensure the ground is clear of any obstacles such as pipes and rocks.
- ▮ Take care when hitting the stake into the ground ensure you do not hit the spindle.
- ▮ Before putting up the banner ensure it will be clear of overhead electrical cables when standing at its full height.
- ▮ Clean with warm, soapy water.
- ▮ Dry thoroughly before packing away.
- ▮ To increase the life-span of your banner take down at night or in winds exceeding 25 knots. Remember, colour lasts longer in the shade.

